



Kodak EasyShare M381 SD Card Replacement

This guide will assist in the removal of the SD Card.

Written By: Johannes Chandler



INTRODUCTION


Using this guide, you can remove your SD card from your camera.

Step 1 — SD Card



- Push down and slide as indicated on the battery latch.

Step 2

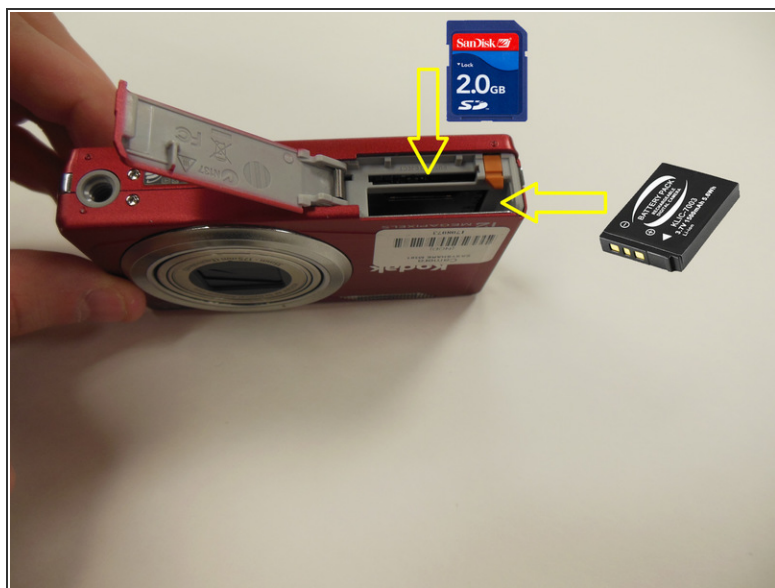

- Push in on the SD Card until it clicks and releases. Remove SD Card.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-08 09:03:48 AM.

